


V004 Visor Fitting Template

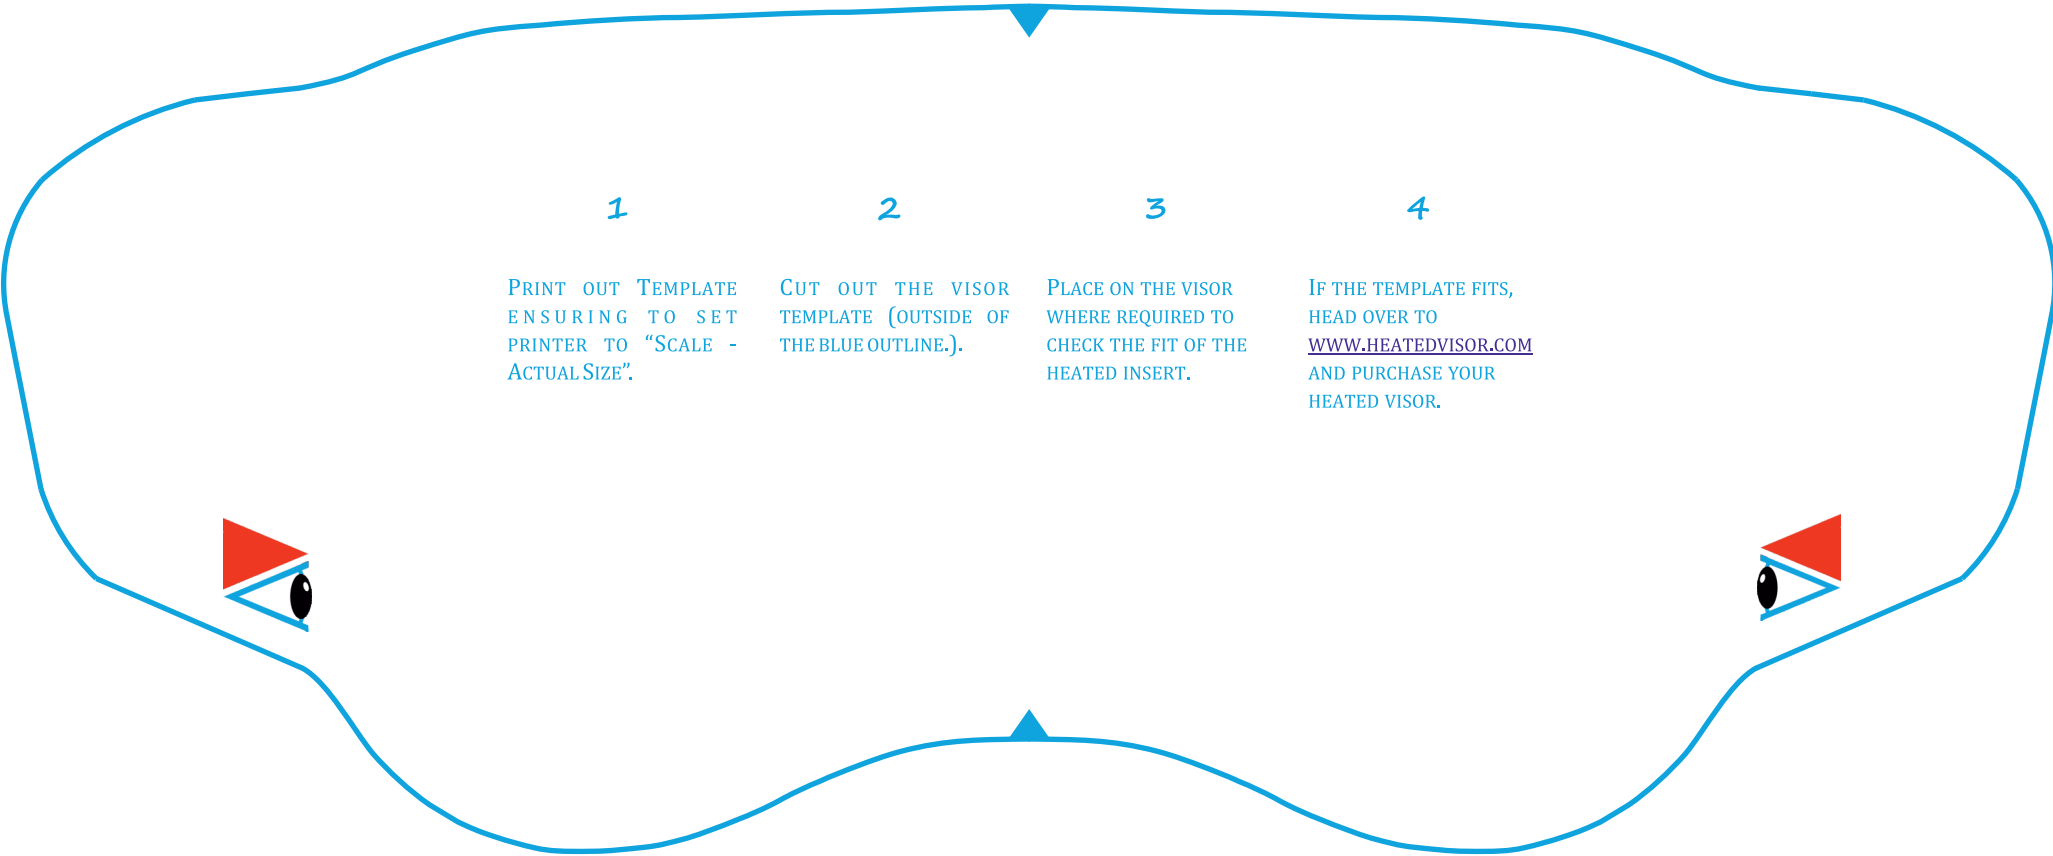

- 1
PRINT OUT TEMPLATE
ENSURING TO SET
PRINTER TO "SCALE -
ACTUAL SIZE".
- 2
CUT OUT THE VISOR
TEMPLATE (OUTSIDE OF
THE BLUE OUTLINE.).
- 3
PLACE ON THE VISOR
WHERE REQUIRED TO
CHECK THE FIT OF THE
HEATED INSERT.
- 4
IF THE TEMPLATE FITS,
HEAD OVER TO
WWW.HEATEDVISOR.COM
AND PURCHASE YOUR
HEATED VISOR.

TO BE PRINTED ON A4

	V004 Visor Fitting Template
	 Cut out-side the line, Template perimeter